

410 INSTRUCTIONS

**Your Stopwatch features • 24-Hour Stopwatch • Time-of-Day and Calendar
• Alarm Clock • 12/24-Hour Time Option**

STOPWATCH OPERATION

Press **A** until you get to the stopwatch display.
If necessary, press **B**, stop and **C** — reset to 0.

START/STOP TIMING

B — Start, **B** — Stop.
(Repeatedly press **B** for time-in / time-out timing)
C — Reset.

SPLIT TIMING

B — Start, **C** — Split. **C** — Release (Repeatedly press **C**, **C** for more split times) **B** — Stop **C**, **C** — Reset.

1 - 2 FAST FINISH

B — Start, **C** — Stop #1 **B** — Stop #2 (See record #1 time)
C — Release (See record #2 time) **C** — Reset to 00.

TIME/CALENDAR & ALARM DISPLAY

Press **A** until you get to the Time Display.
Hold **B** - display Month, Date & Day.
Hold **C** - see Alarm Time.
Hold **C** and Press **B** - Alarm and Chime alarms will toggle ON and OFF.

TO SET TIME & CALENDAR

Press **A** & hold 3 seconds - then press **A** once again to enter Set Mode.
Press **B** to select Seconds, Minutes, Hour (**A/P**= 12-Hour. **H**= 24-Hour) Date, Month, Day
Press **C** to change any of the above. (Seconds only resets to 00)
Hold **C** to change digits rapidly. Press **A** to return to Time Display.

TO SET/DISARM HOURLY CHIME/ALARM

Press **A** - until you get Time Display.
Hold **C**-see Alarm Time.
Press **B**- chime is ON when bell appears above display. Chime is OFF when no bell appears. Alarm is ON when symbol appears. Off when no symbol appears.

ELECTRO LUMINESCENT LIGHT

Press **D**- EL Light will remain on for 3 seconds.
Hold **D**- EL Light will remain on. It will go off 3 seconds after you release the button.


TO SET ALARM

Press **A**- hold 3 seconds to enter Set Mode.
Press **B**- to select Minutes or Hours.
Press **C**- to change Minutes or Hours.
Press **A**- to return to Time Display.

TO SWITCH FROM 12 TO 24 HOURS in Normal Time Mode, press and hold down **C**, then press **A**. "**A**" or "**P**" will appear for AM/PM noting for 24 hour.

BATTERY

For best results, use one CR2032 or equivalent 3V Silver Oxide or Alkaline Battery.

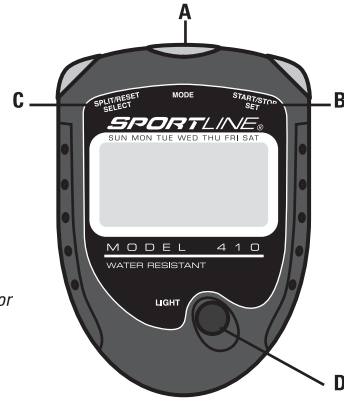

GUARANTEE CERTIFICATE

If at any time within three (3) year from the purchase date of this product, it fails to perform properly because of defects in material or manufacturing, return it prepaid to:

E&B GIFTWARE, LLC, 585 Oak Ridge Road, Hazleton, PA 18202

Complete this Guarantee Certificate and enclose it (or a copy of it) with the product. To expedite replacement or repair, **do not return** the defective unit to the store from which it was purchased but return it directly to SPORTLINE.

(PLEASE PRINT CLEARLY)

NAME _____ TEL _____

ADDRESS _____

CITY _____

STATE _____ ZIP _____

STORE PURCHASED FROM _____

DATE OF PURCHASE _____ PURCHASE PRICE _____

PROBLEM WITH PRODUCT _____

REPLACEMENT

This product has been carefully designed, manufactured and packaged. If any parts are missing or damaged, please contact us at the address above and we will replace unit at no charge. (Guarantee does not cover crystal or battery.) By contacting SPORTLINE, Inc. rather than the company from which you purchased this product, we will be able to more rapidly service your needs.

AFTER WARRANTY

If the warranty period has expired and the unit is returned to Sportline for servicing, enclose \$7.50 for postage and handling. Send your unit insured to our Service Department listed below. If you are located outside the United States either return the unit by insured mail or to the dealer/distributor where purchased.

SPORTLINE[®]
THE PROFESSIONAL'S CHOICE
E&B GIFTWARE, LLC, 585 Oak Ridge Road, Hazleton, PA 18202