


Racing Lane Installation Instructions – SS Lock and Spring

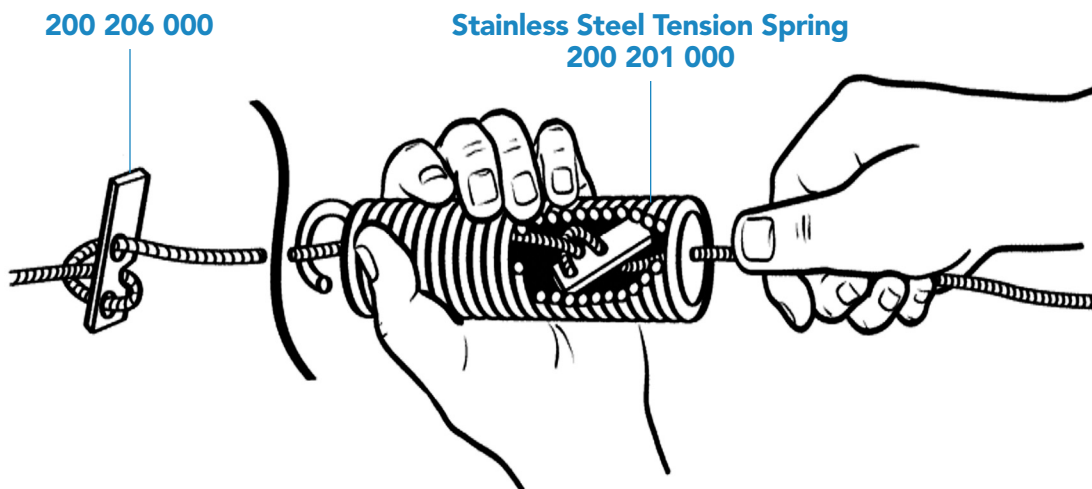

Installation Instructions

1. Remove old cable lock from cable.
2. Insert cable through new cable lock as shown above on left, leave at least 5" of cable extending through the cable lock.
3. Seat cable securely in half moon groove on side of cable lock by pulling on cable before inserting into spring.
4. Pull cable with cable lock installed, long end first into spring as shown above on the right.

www.competitorswim.com
800-888-SWIM (7946)