


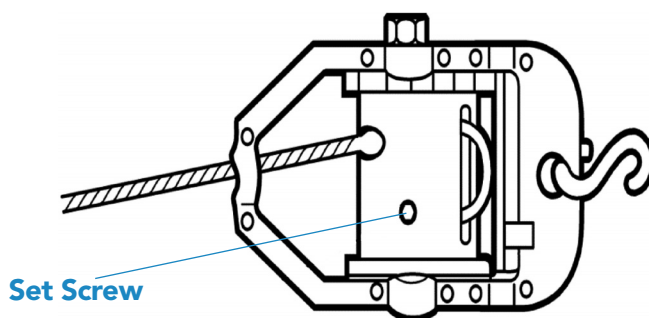

Racing Lane Modification Instructions

TO SWITCH OUT CABLES AND ATTACH TAKE UP REEL

1. Lay Competitor® Racing lane on a flat surface or pool deck.
2. Remove the spring from the lane by pulling cable from hook end and disconnecting the cable from the cable lock.
3. Using a small piece of glass tape provided – butt the end of the new cable to the loose end of the cable on the lane.
4. Gently snake the new cable on through the lane by pulling out the existing cable.
5. Once the new cable has worked all the way through, remove the glass tape.
6. Thread the new cable onto the Take-Up-Reel Spool (remember to feed cable through the hole with no set screw first – per drawing).
7. Tighten set screw firmly to complete modification.



www.competitorswim.com
800-888-SWIM (7946)

