

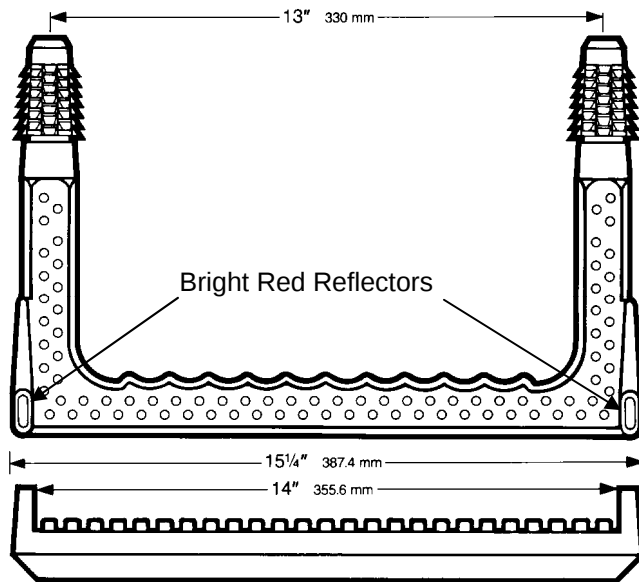


P-14850 P-14938

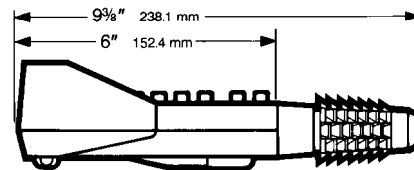

Step # P-14850

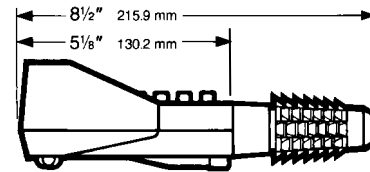


Step # P-14938

INSTALLATION

Drive into preformed holes with a 6 to 10 lb. sledge hammer after concrete is cured to 3,000 PSI minimum.

Steps can also be driven into two parallel 1" diameter drilled holes, 13" on center, 3-3/4" deep. Apply epoxy or a non shrink grout around the barbed ends of the step. Pound the steps into the 1" holes allowing the epoxy or grout to flow out to the square shoulder of the step

The above methods will resist a pullout force of over 1,500 lbs.

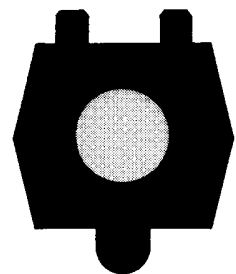

RUNG
1/2" Grade 60 Rebar

LANE POLYPROPYLENE MANHOLE STEPS

LANE INTERNATIONAL
CORPORATION

P.O. Box 925 • 10758 S.W. Manhasset Dr. • Tualatin, OR 97062 • 503-692-9860 • 800-666-0076
Fax 503-692-9863 • www.laneinternational.com