




997-210

**997-210 BIKE RACK  
5 LOOP DIRECT BURY**

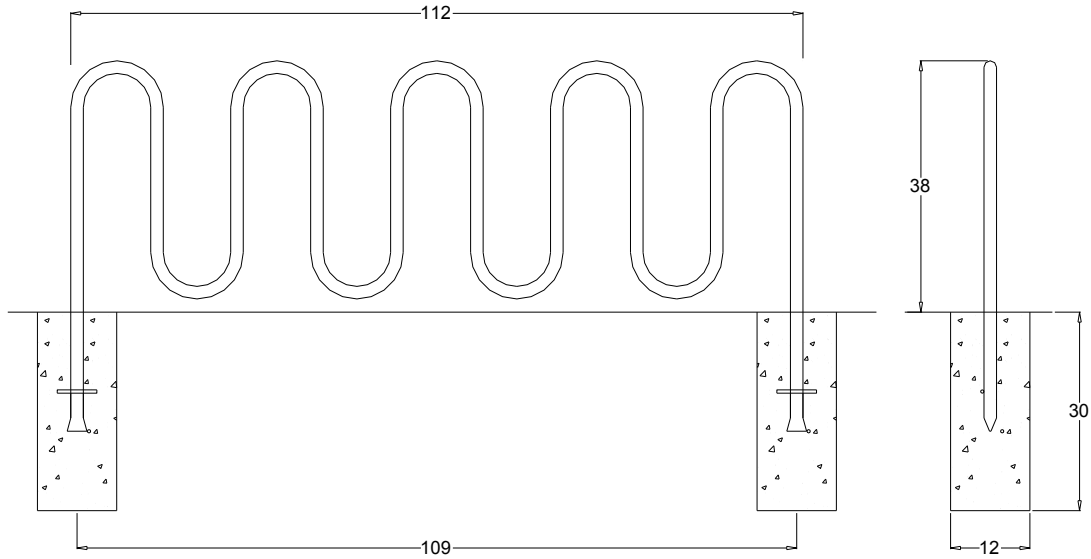

Part No.	Description	Qty.
651-022	5 Loop Bike Rack Direct Bury	1

- 1 Use bike rack to locate ground hole location. *(The 109" dimension may vary.)*
- 2 Drill holes in ground as shown.
- 3 Support the bike rack in the holes and fill the holes with concrete.
- 4 Remove the supports after the concrete has set.

In Accordance to California law: WARNING This product contains a chemical know to the State of California to cause cancer and birth defects or other reproductive harm.



**PREMIER POLYSTEEL**

The Best Commercial Outdoor Furniture Available. Period.

