




997-510

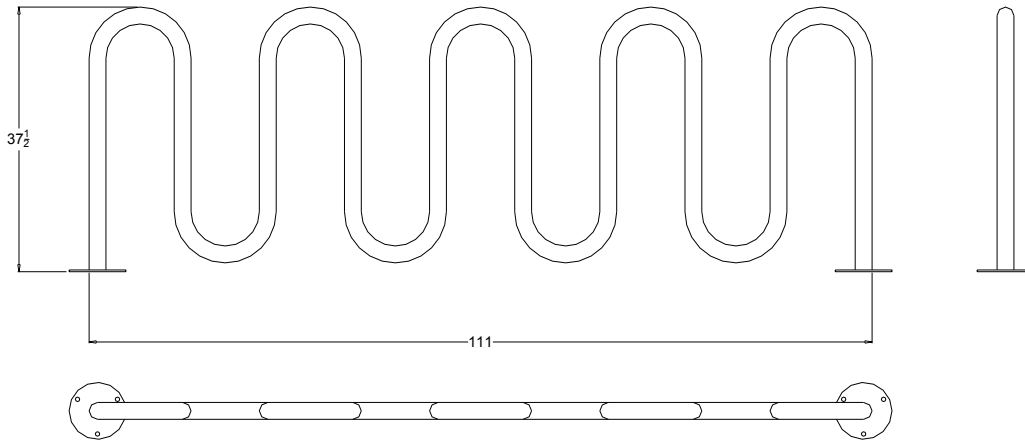

- 1 Drill plastic out of the mounting holes with a 7/16" dia. drill bit.
- 2 Position bike rack where desired.
- 3 Secure to the surface with the appropriate fasteners.

In Accordance to California law: WARNING This product contains a chemical know to the State of California to cause cancer and birth defects or other reproductive harm.

Periodic check of bolt tightness recommended.



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.

