




997-205

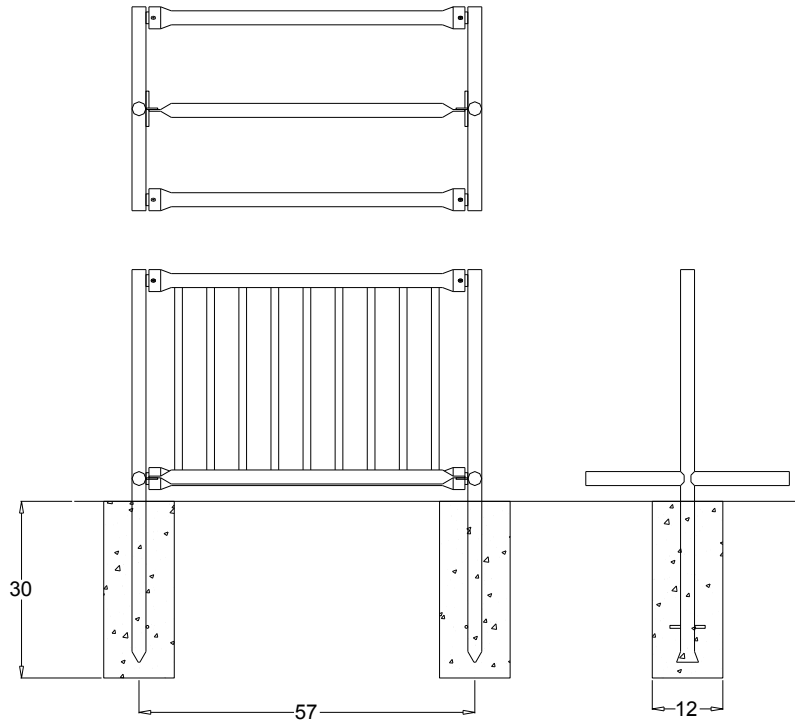

Part No.	Description	Qty.
651-011	Bike Rack End Direct Bury	2
651-014	5' Bike Fence Direct Bury	1
651-015	5' Bottom Rail Direct Bury	2
516-058	3/8" X 1-1/2" SS Hex Bolt	8
516-028	3/8" SS Nylock Nut	8
516-023	3/8" SS Washer	16

- 1 Drill plastic out of the mounting holes on the ends, rails and fence using a 7/16" dia. drill bit.
- 2 Fasten the fence to the rack ends loosely.
- 3 Fasten the rails to the rack ends loosely.
- 4 Check the alignment of the parts and tighten all bolts securely.
- 5 Drill two 12" diameter holes in the ground per the above drawing.
- 6 Position bike rack in holes and level.
- 7 Fill holes with concrete no higher then ground level.

In Accordance to California law: WARNING This product contains a chemical know to the State of California to cause cancer and birth defects or other reproductive harm.

Periodic check of bolt tightness recommended.



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.

