



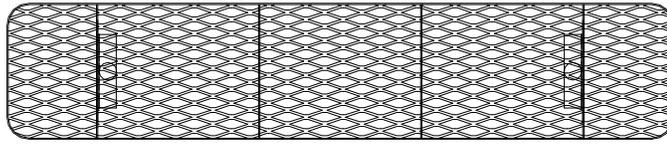

937-302

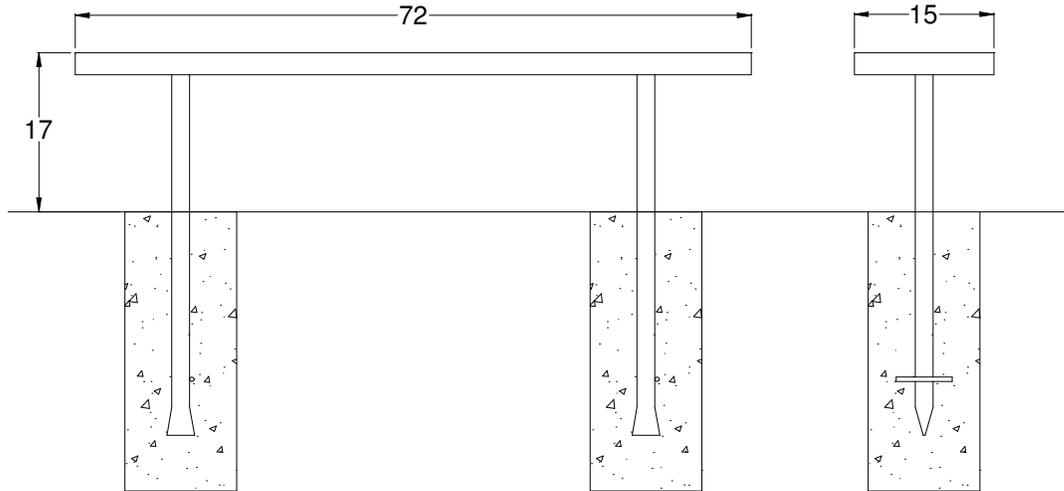

937-302 6FT
SUPREME CHAMPION
DIRECT BURY
BENCH WITHOUT BACK



Part No.	Description	Qty.
622-113	6' Supreme Champion seat/back	1
631-120	Supreme Stand (Direct Bury)	2
516-058	3/8" x 1-1/2" SS Hex Bolt	4
516-028	3/8" SS Nylock Nut	4
516-023	3/8" SS Washer	8

- 1 Drill plastic out of the mounting holes on the stands, seat and braces using a 7/16" dia. drill bit.
- 2 Fasten the seat to the stands loosely and then fasten the braces to the stands and seat.
- 3 Make sure bench is level and tighten all of the bolts.

In Accordance to California law: WARNING This product contains a chemical know to the State of California to cause cancer and birth defects or other reproductive harm.

Periodic check of bolt tightness recommended.



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.

