




936-302

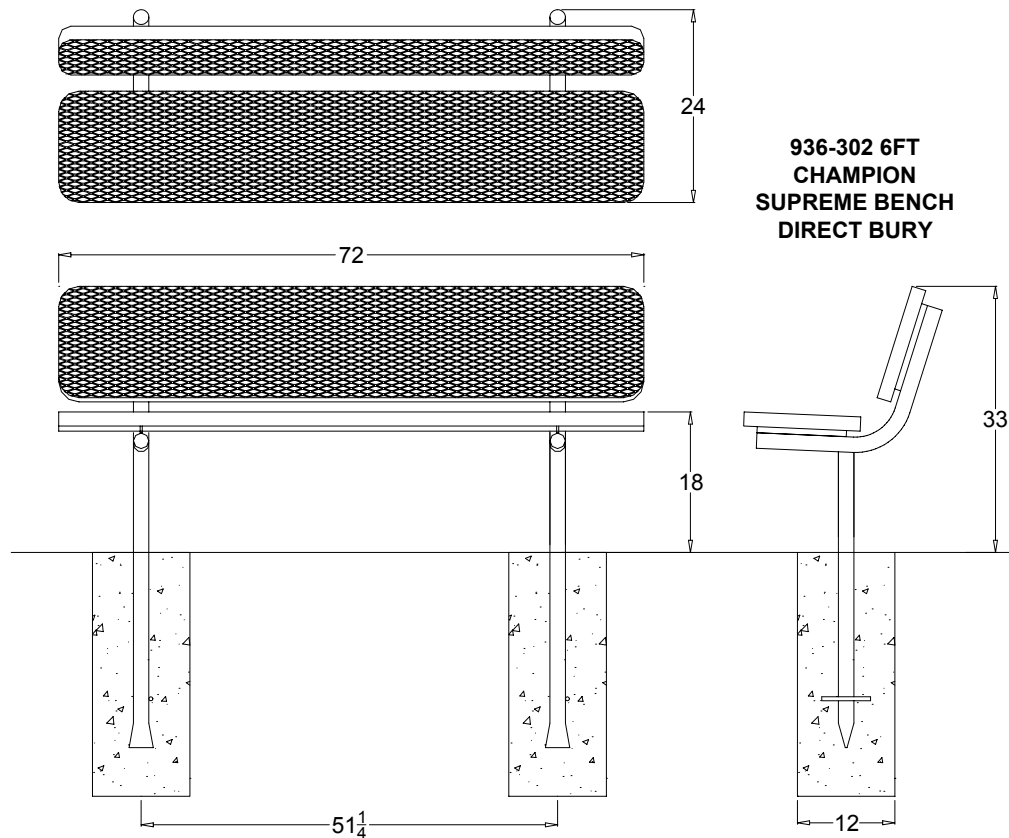

**936-302 6FT
CHAMPION
SUPREME BENCH
DIRECT BURY**

Part No.	Description	Qty.
622-113	Champion Supreme Seat/Back	2
630-120	Supreme Stand (Direct Bury)	2
516-058	3/8" x 1-1/2" SS Hex Bolt	8
516-028	3/8" SS Nylock Nut	8
516-023	3/8" SS Washer	16

- 1 Drill plastic out of the mounting holes on the stands and the seat using a 7/16" dia. drill bit.
- 2 Attach seat and back to stands with 3/8" x 1-1/2" SS hex bolts, washers and nuts.
- 3 Secure in concrete footing as shown.

In Accordance to California law: WARNING This product contains a chemical know to the State of California to cause cancer and birth defects or other reproductive harm.

Periodic check of bolt tightness recommended.



PREMIER POLYSTEEL

The Best Commercial Outdoor Furniture Available. Period.

