





## 937-502



937-502 8ft  
SUPREME CHAMPION  
DIRECT BURY  
BENCH WITHOUT BACK

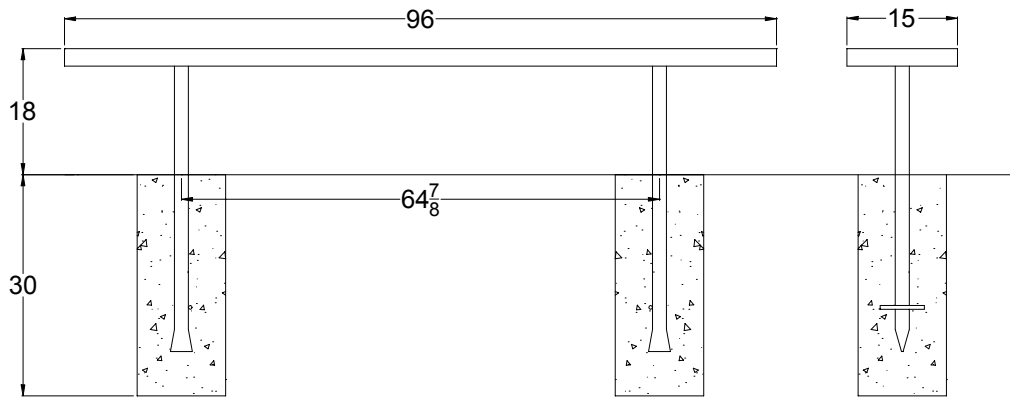

Part No.	Description	Qty.
622-115	8' Supreme Champion seat/back	1
631-120	Supreme Stand (WO/Back) (Direct Bury)	2
516-058	3/8" x 1-1/2" SS Hex Bolt	4
516-028	3/8" SS Nylock Nut	4
516-023	3/8" SS Washer	8

- 1 Drill plastic out of the mounting holes on the stands and the seat using a 7/16" dia. drill bit.
- 2 Attach seat to stands with 3/8" x 1-1/2" SS hex bolts, washers and nuts.
- 3 Secure in concrete footing as shown.

In Accordance to California law: WARNING This product contains a chemical know to the State of California to cause cancer and birth defects or other reproductive harm.

*Periodic check of bolt tightness recommended.*



**PREMIER POLYSTEEL**

The Best Commercial Outdoor Furniture Available. Period.

