

INSTALLATION INSTRUCTIONS

STEP 1 INSTALL THE ASSEMBLED EASY LADDER

With the assistance of another person, carefully place the assembled unit in its planned location. Use caution and lift the unit. Do not drag the unit across the deck or pool gutter. See figure 1.

STEP 2 INSPECT FOR PROPER FIT

Once the unit is in place, inspect it for firmness and a solid footing. It should not wobble or rock. If it does, try moving it slightly to the left or right. This may correct the problem if you are not sure of the exact location where the unit was measured and intended for. Check to make sure that the DECK ADAPTER lays flat on the deck, and the front corners of the bottom step touches the pool floor.



MAKE SURE YOU INSTALL THE UNIT IN THE EXACT LOCATION IT WAS MEASURED FOR.

2 Persons Required

fig. 1


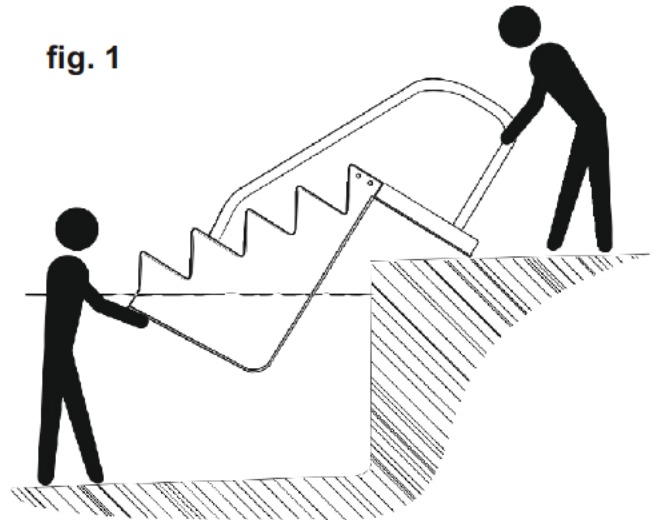


fig. 2

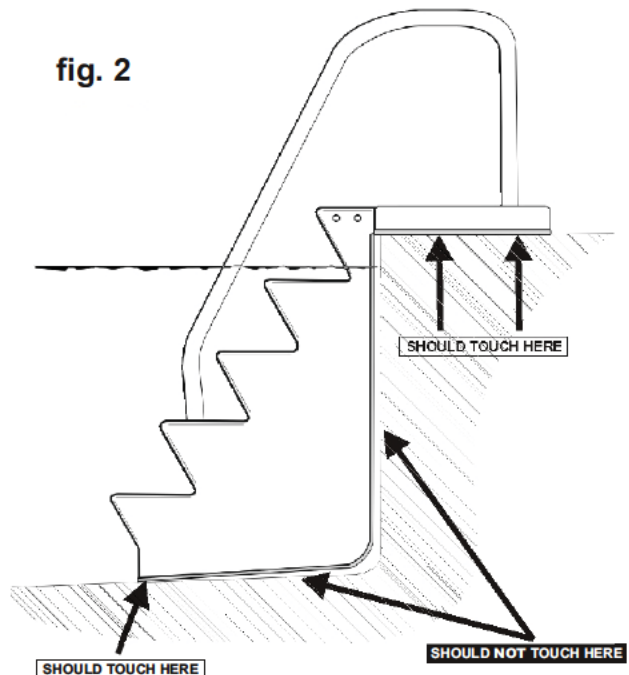

MAKE SURE YOU INSTALL THE UNIT IN THE EXACT LOCATION IT WAS MEASURED FOR.

USAGE INSTRUCTIONS

INSTRUCT ALL USERS TO “ENTER BACKWARDS”

The EASY LADDER is designed to be used as a ladder. It is critical that all users of this product are instructed to enter and exit the pool facing the same direction- away from the pool. See figure 3.

DO NOT ALLOW USERS TO ENTER OR EXIT THE POOL FACING TOWARD THE POOL OR SERIOUS INJURY MAY OCCUR.

See figure 4.


Use as a ladder by entering backwards

CORRECT

fig. 3



fig. 4

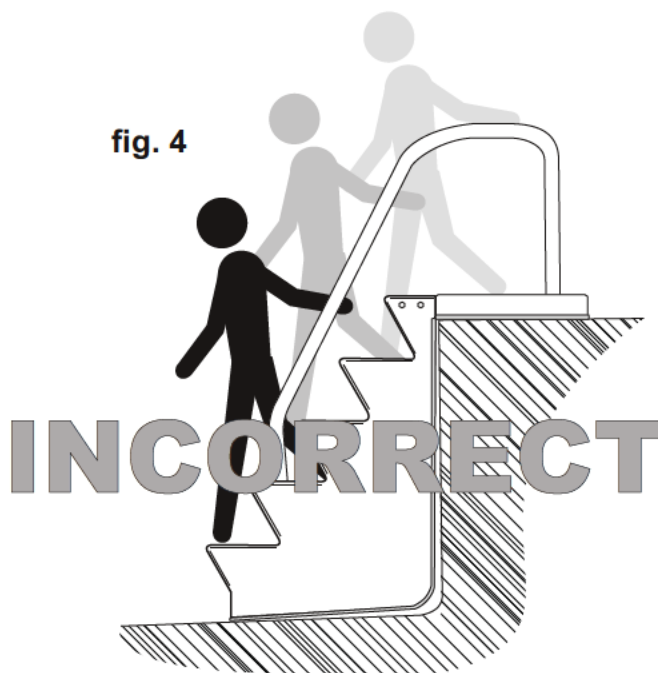

USAGE INSTRUCTIONS

USING THE DOLLY

The EASY LADDER DOLLY is designed to make transporting your EASY LADDER to and from storage less of a strain and for installation or removal of your EASY LADDER.

To remove your EASY LADDER from the pool, tip it forward and hook the dolly under the rear edge of the DECK ADAPTER with the aluminum blocks underneath. Next, pivot the dolly upwards. It will wedge itself in and should feel firmly attached.

See figure 5.

To move your EASY LADDER on the pool deck, standing at the bottom front step, left and roll the unit. The weight will be evenly distributed and will be easy to roll around and move.

See figure 6.

To install the EASY LADDER with the DOLLY, roll the unit to the edge of the pool and slowly pull out & lower the bottom step to the pool floor. Then, lift the DECK ADAPTER and remove the DOLLY.



**CHECK LADDER IS FITTING
SECURELY IN POOL
BEFORE USE.**

**DO NOT ALLOW THE UNIT TO DRAG
ACROSS THE GUTTER, DECK OR
FLOOR.** Doing so will result in damage to the pool and/or your EASY LADDER.

fig. 5


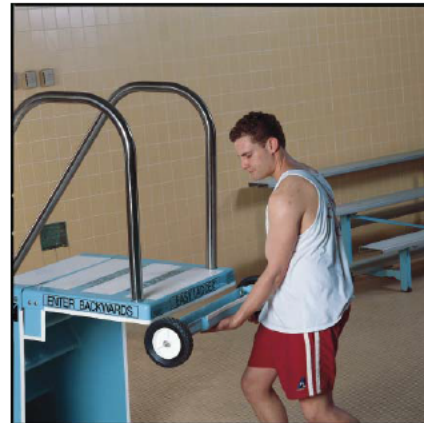


fig. 6



CORRECT

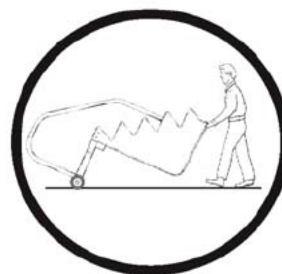

NOT CORRECT

CARE & MAINTENANCE

Remove the product from the pool before performing any cleaning or maintenance.

CLEANING

Use only a NON-ABRASIVE cleanser when cleaning this product to avoid scratching and damage to the finish. Do not use any waxes or furniture polishes!

Periodically, you may wish to mechanically buff the finish to restore the shine and color. We recommend using these products.

Cleaning

- Formula 409 All Purpose Cleaner
- CLOROX SOFT-SCRUB

Buffing

- 3M™#05954 Super Duty Rubbing Compound

Recommended Equipment

- Dewalt #DW847 Heavy Duty Polisher/ Buffer
- 3M™#05705 Super-Buff Pad (requires 3M# 05710 adapter)

MAINTENANCE

Frequent inspection of the following is critical:

HANDRAILS

The handrails will become loosened with use, particularly within the first few months. Remove the product from the pool and re-tighten the hex bolts inside the ends of each handrail using a 1/2" box wrench.

NON-SKID TREADS

Check that the non-skid treads on each step of the ladder and the deck adapter are clean and intact at all times whenever in use. The gelcoated fiberglass surface underneath the non-skid treads are smooth and slippery. If the treads become worn or removed, exposing the slippery surface can result in serious injury. Replacement treads can be ordered from Triad by calling 1-800-729-7514.

SAFETY DECALS & PLACARDS

There are several safety warning decals and placards on your new Easy Ladder®. Periodically check to make sure they are intact and fully legible. Replacement decals can be ordered from Triad by calling 1-800-729-7514.

PROTECTIVE U-CHANNEL TRIM

This protective edge trim protects your flooring and pool surfaces from damage. It contains aluminum ribs that can become exposed if torn or ripped, potentially causing damage to your flooring or even injury when handling. Periodically check to make sure it is intact and not torn. Replacement U- Channel trim can be ordered from Triad by calling 1-800-729-7514.